

Beta Clam Press

How to change a Controller

Replacement/Removal of Controller

N.B. Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply

1. Remove six screws from Rear Cover (pic 1)
2. Remove Rear Cover from Instrument Cover
3. Remove wires connected to Controller (pic 2), taking note of the connections for future reference when reinstalling new Controller
4. Remove the two Dome Nuts securing Controller to Facia (pic 3)
5. Remove Controller from back of Instrument Cover

Re-installation of replacement Controller

1. Installation is a reversal of removal

