

## Beta Clam Heat Press

### How to change a Fuse Holder(s)

#### Replacement/Removal of Fuse Holder(s)

**N.B.** Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply

1. Remove six screws from Rear Cover (pic 1)
2. Disconnect wires from Fuse Holder(s) (pic 2 arrow-a), taking note of the connections for future reference when reinstalling
3. Using an 18 mm spanner, undo Locking Nut(s) (pic 2 arrow-b) securing Fuse Holder(s) to Instrument Cover
4. Pull Fuse Holder Fuse Holder(s) out from Instrument Cover

#### Re-installation of replacement Fuse Holder(s)

1. Installation is a reversal of removal

