

Beta Clam Press

How to change a Micro Switch

Replacement/Removal of Micro Switch

N.B. Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply

1. Remove six screws from Rear Cover (pic 1)
2. Disconnect wires from Micro Switch (pic 2 arrow-a), taking note of the connections for future reference when reinstalling
3. Remove screws securing Micro Switch to Bracket (pic 2 arrow-b)

Re-installation of replacement Micro Switch

1. Installation is a reversal of removal
- N.B.** After re-installing Micro Switch it is advisable to test the new unit is operating when Heat Plate is moved to the down position. If adjustment is required the bracket can be moved to allow correct function of the Micro Switch

