

## Beta Swift Heat Press

### How to change a Controller


#### Replacement/Removal of Controller

**N.B.** Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply

1. Remove six screws from Base Board (pic 1)
2. Remove Base Board from Casting
3. Remove wires connected to Controller (pic 2), taking note of the connections for future reference when reinstalling new Controller
4. Remove the two Dome Nuts securing Controller to Facia (pic 3)

#### Re-installation of replacement Controller


1. Installation is a reversal of removal

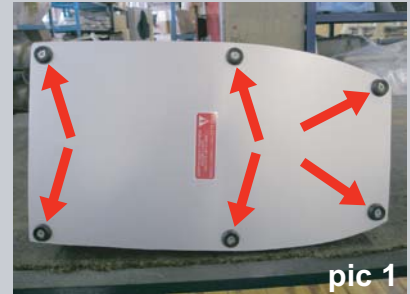

pic 1



pic 2

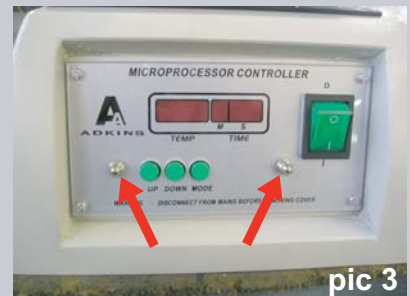

pic 3