

Delta Cap Press

How to change a Buzzer

Replacement/Removal of Buzzer

N.B. Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply

1. Remove Rear Cover Plate and 8 screws (pic 1)
2. Remove Timer Unit by pulling upward from Socket (pic 2) leaving Socket attached to Base Plate
3. Disconnect Buzzer wires (pic 3), taking note of their position for future reference when reinstalling
4. Remove Buzzer from Instrument Cover

Re-installation of replacement Buzzer

1. Installation is a reversal of removal

