

## Delta Junior Heat Press

### How to change a Heating Element

#### Replacement/Removal of Heating Element

**N.B.** Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply

1. Remove Instrument cover by unscrewing two securing screws (pics 1 & inset reverse view)
2. Disconnect Element wires from Connector Block (pic 2), taking note of their position for future reference when reinstalling
3. Loosen Cable Gland and pull Element wires out from Instrument Cover
4. Remove Rheostat Knob by loosening grub screws (pic 3) and pulling Knob off Rheostat
5. Put Heat Plate in down position
6. Remove Heat Plate bolts and brackets
7. Lift Handle and Lever into the up position (pic 5)
8. Lift off Heat Plate Cover and spacer (pic 5), taking note of their position for future reference when reinstalling
9. Remove Rheostat securing screws (pic 6) and Earth wire from Heat Plate (pic 7)
10. Lift Element out

#### Re-installation of replacement Heating Element

1. Installation is a reversal of removal

