

Delta Junior Heat Press

How to change an Internal Fuse

Replacement/Removal of an Internal Fuse

N.B. Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply

1. Remove Instrument cover by unscrewing two securing screws (pics 1 & inset reverse view)
2. Lift Cover clear of Heat Press (pic 2)
3. Lift Fuse from Fuse Holder (pic3)

Re-installation of replacement Internal Fuse

1. Installation is a reversal of removal

