

Delta Junior Heat Press

How to change the Springs

Removal/Replacement of Springs

- N.B.** Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply
1. Put the Heat Plate in the up position, and machine laid on it's side
 2. Remove the Springs from securing bolts using a pair of Long Nose Pliers (pic 1)

Re-installation of replacement Springs

1. Installation is a reversal of removal

