

Major/Minor Heat Press

How to change a Fuse Holder(s) fitted in Base - Older Machine Models

Replacement/Removal of Fuse Holder(s)

N.B. Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply


1. Place Press on it's right-hand side, on a flat, soft surface
2. Unscrew the ten Rubber Feet from the Base Board and remove (pic 1)
3. Lift Base Insulation Board from Press
4. Disconnect Fuse Holder(s) wiring, taking note of the connections for future reference when reinstalling (pic 2 arrow-a)
5. Using an 18 mm spanner, undo locking nuts (pic 2 arrow-b) holding Fuse Holder(s) in Instrument Cover
6. Remove Fuse Holder(s)

Re-installation of replacement Fuse Holder(s)

1. Installation is a reversal of removal



pic 1

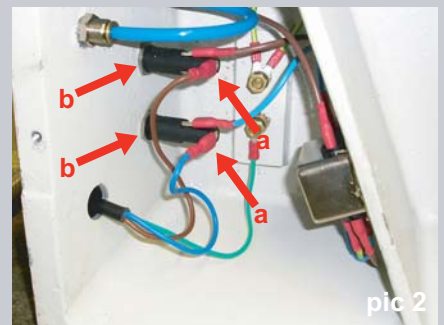

pic 2