

Omega 1000-1001 Heat Press

How to operate the Flow Regulator

N.B. Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply

1. Unlock Locking Nut on Flow Regulator (pic 1)
2. Rotate Flow Regulator both clockwise and anticlockwise, until a smooth movement is achieved when the Heat Plate is going up and down (whilst press is being operated)
3. Rotating Flow Regulator anticlockwise speeds up movement whilst clockwise rotation slows down movement

