

Studio Cap Heat Press

How to change a Micro Switch

Replacement/Removal of Micro Switch

N.B. Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply

1. Remove two screws from Micro Switch (pic 1)
2. Pull back insulation on wires going to Micro Switch (pic 2)
3. Cut wires off as close as possible to connections on Micro Switch (pic 3)
4. Strip wire and fit Crimp Connectors then refit to Micro Switch (pic 4)
5. Refit Micro Switch to Press with two securing screws, making sure P-clip is securing wire (pic 5)
6. Operate machine and when Press is in the down position the Micro Switch should operate and activate Counter on Display

Re-installation of replacement Micro Switch

1. Installation is a reversal of removal

