

# Studio Cap Heat Press

## How to change the Tension Spring

### Removal/Replacement of Tension Spring

**N.B.** Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply

1. Put the Operating Arm in the down position
2. Remove the Tension Spring from Run Arm locating bolt using a pair of Long Nose Pliers (pic 1)
3. Remove the other end of the Tension Spring from Operating Arm locating hole also using a pair of Long Nose Pliers (pic 2)

### Re-installation of replacement Tension Spring

1. Installation is a reversal of removal

