

Studio Clam 28-38 Press

How to change Return Springs

Replacement/Removal of Return Springs

N.B. Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply

1. Remove Rear Cover by unscrewing 8 retaining screws (pic 1)
2. Hold Heat Plate in the up position
3. Pull Springs out of securing holes (pic 2)
4. Unhook other end of Springs from Anchor Points (pic 3)

Re-installation of replacement Return Springs

1. Installation is a reversal of removal

