

Studio Clam 28-38 Press

How to change a Solid State Relay

Replacement/Removal of a Solid State Relay

N.B. Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply

1. Remove Rear Cover by unscrewing 8 retaining screws (pic 1)
2. Disconnect all wires connected to Solid State Relay (pic 2 arrow-a), taking note of their position for future reference when reinstalling
3. Remove securing screws on Solid State Relay (pic 2 arrow-b)
4. Separate Relay from Heat Sink

Re-installation of replacement Solid State Relay

1. Installation is a reversal of removal
- N.B.** Heat Sink Compound should be applied to base of Solid State Relay, before refitting.

