

Studio Mug Heat Press

How to change a Micro Switch

Replacement/Removal of a Micro Switch

N.B. Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply

1. Remove Base Cover and 2 screws (pic 1)
2. Remove Controller from Cast Body (pic 2)
3. Cut cable ties holding Micro Switch wires (pic 3 arrow-a)
4. Remove Micro Switch connector from Controller by pulling Plug upwards (pic 3 arrow-b)
5. Remove screws securing Micro Switch (pic 3 arrow-c) and remove from Cast Body

Re-installation of replacement Micro Switch

1. Installation is a reversal of removal

