

## Studio Plate Press


### How to change a Heater/Element

#### Replacement/Removal of a Heater/Element


- N.B.** Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply
1. Unlock securing ring by turning in an anticlockwise direction holding Plug and Socket together (pic 1), then extract Plug from Socket
  2. Holding firmly, turn Heater/Element Assembly so that dome head bolts align with large holes in key hole slots (pic 2)
  3. Drop Heater/Element Assembly down from Press Board (pic 3)

#### Re-installation of replacement Heater/Element

1. Installation is a reversal of removal
- N.B.** Take care that Plug locating groove is aligned with raised key in Socket when inserting Plug into Socket

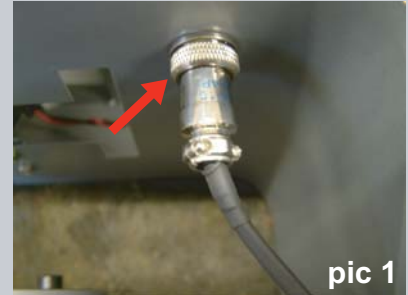

pic 1

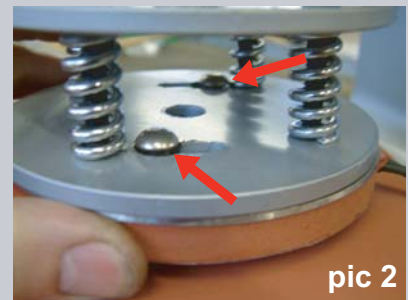

pic 2



pic 3