



## How to remove a stop block and fit a new stop bar

## BETA MAXI/ MINI

### Replacement/ removal of stop bar

- N.B.** Before undertaking any work, switch off the power supply to the machine and unplug the machine from the electricity supply
1. Remove socket head screw from stop block using a 6 mm allen key (pic 1)
  2. Lift block away from pivot arm (pic 2)
  3. Secure end of stop bar in a vice (pic 3)
  4. Remove knurled knob anti clockwise from stop bar (pic 4)
  5. Separate parts, taking note of location of pressure ppring for future reference when reinstalling

### Re-installation of stop bar

1. Installation is a reversal of removal

